



17-W Series Assembly Instructions

TOP CONTROL MOUNT INSTALLATION



1. Pull the factory installed 5 Pin Main Wiring Harness, 7 Pin Com Cable, and 4 Pin Wiring Harness, (not shown) out of the top of the stove.

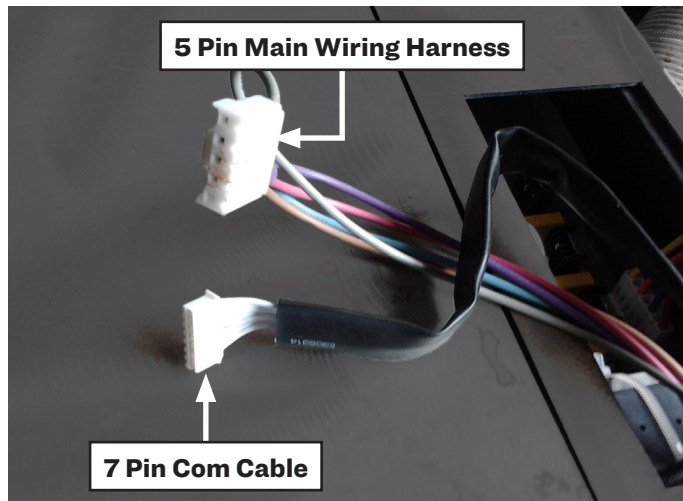

2. Unpack the top mount controls and ensure that all wires are securely attached.
3. Connect the factory installed 5 Pin Main Wiring Harness to the top right-hand corner of the control panel. Connect the factory installed 7 Pin Com Cable to the control panel directly below the 5 Pin Main Wiring Harness. Connect the 4 Pin Wiring Harness to the bottom left-hand corner of the control panel.

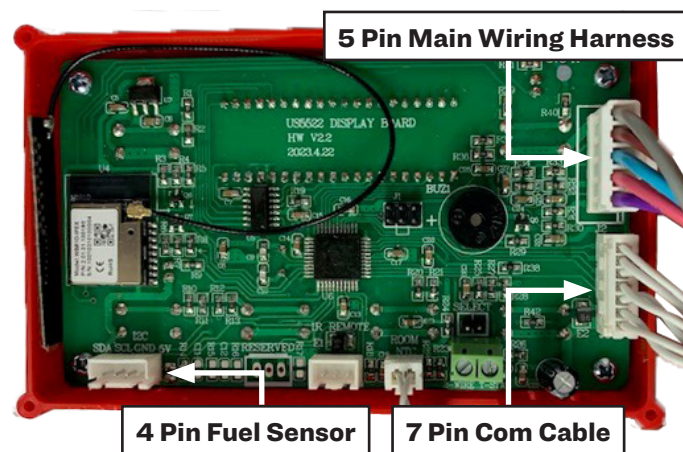


4. Secure the control panel to the top of the stove with two sheet metal screws.

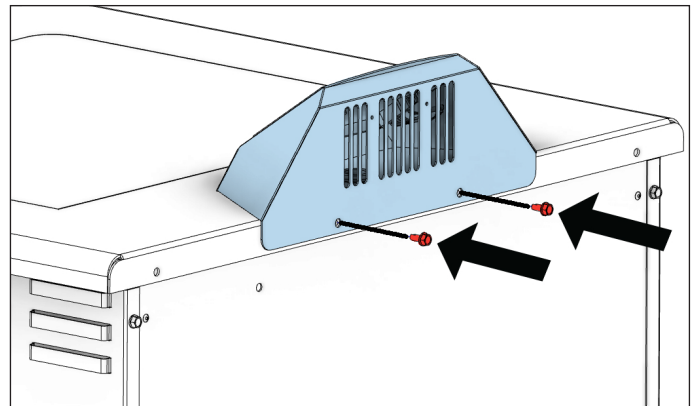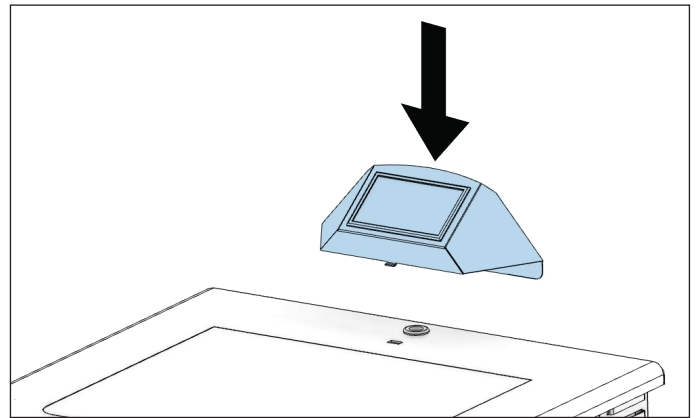


17-W Instructions de montage en série

INSTALLATION DU SUPPORT DE COMMANDE SUPÉRIEUR

1. Tirez le faisceau de câbles principal à 5 broches, le câble de communication à 7 broches et le faisceau de câbles à 4 broches installés en usine (non illustrés) hors du haut du poêle.

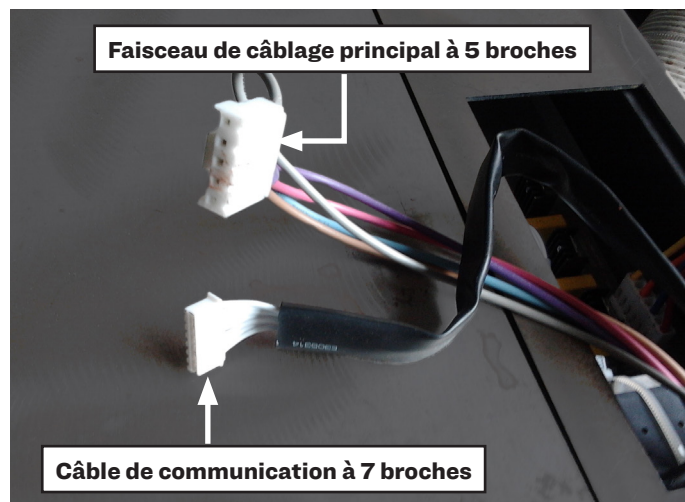

2. Déballez les commandes montées sur le dessus et assurez-vous que tous les fils sont solidement fixés.
3. Connectez le faisceau de câbles principal à 5 broches installé en usine au coin supérieur droit du panneau de commande. Connectez le câble Com à 7 broches installé en usine au panneau de commande directement sous le faisceau de câbles principal à 5 broches. Connectez le faisceau de câbles à 4 broches au coin inférieur gauche du panneau de commande.

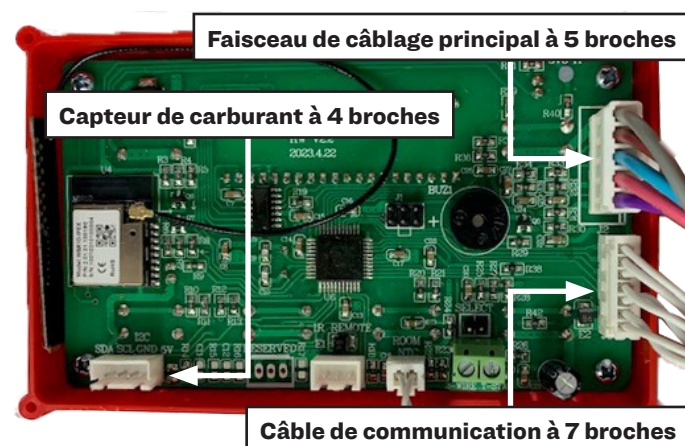

4. Fixez le panneau de commande sur le dessus du poêle avec deux vis à tête.

