


Instruction Sheet


1800E Series Assembly Instructions

ASSEMBLE THE SURROUND

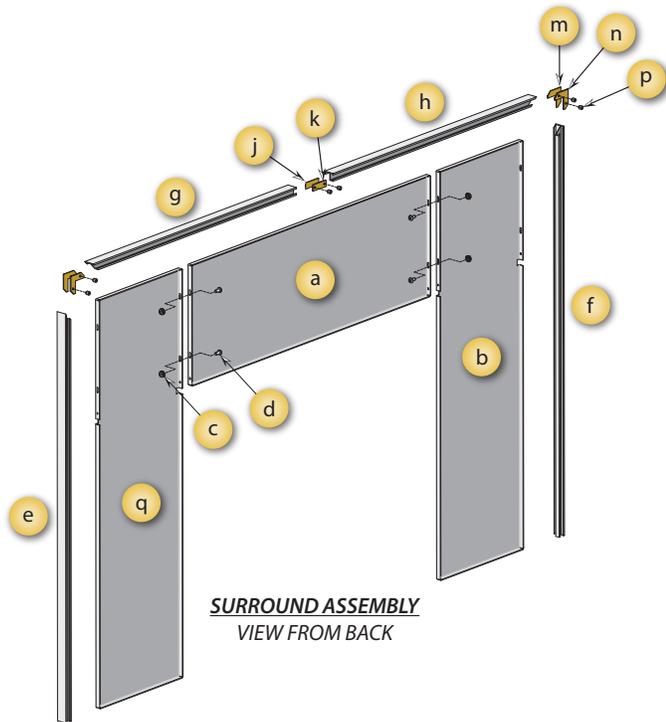


1. Lay pieces face down on carpet or other soft surface to protect finish during assembly. The Surround consists of two side panels, a top panel, and a decorative trim frame.
2. Bolt the top panel (a) to the side panels (b & q) so the top surfaces are flush to one another using items c and d.
3. Assemble the trim frame. The trim consists of a left (f) and right (e) side piece and a split top piece (left h, right g). These are joined by corner connectors (m,n,&p) and two straight center connectors (j&k). These slide into the channel on the back of the frame and are secured with two set screws (p) in each piece.
4. The trim slides over the surround assembly and is secured at the base of each side with a machine screw.

5. Secure the logo to the side panel (q) utilizing the (2) two clips provided.

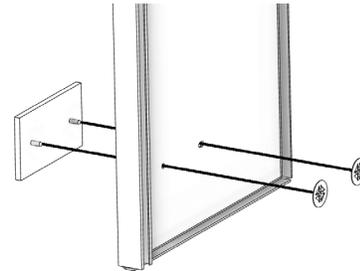

6. The Surround Assembly is then slid over the appliance. Slots in the two side panels accommodate the hood at the top of the appliance. The surround assembly is held in place with two springs at the top of either corner of the appliance.

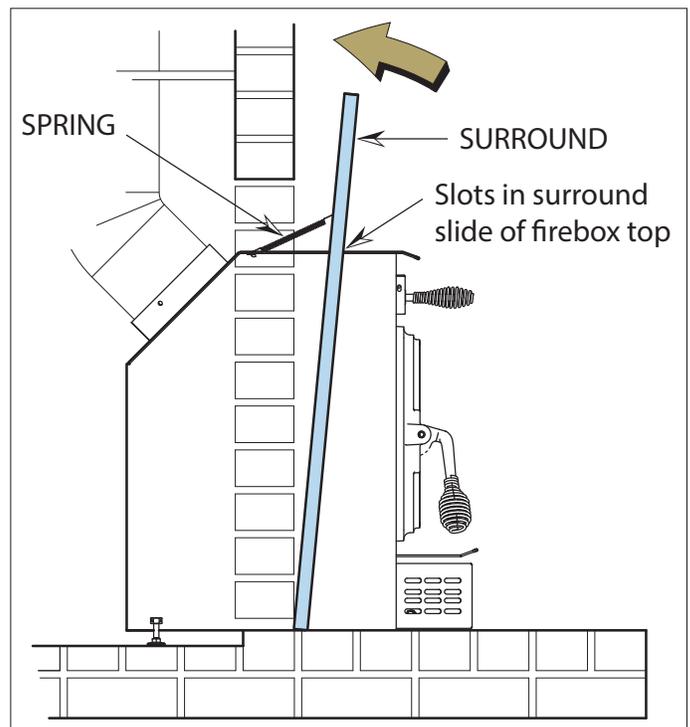


7. Connect power cord of blower to grounded receptacle.
8. Firebrick extends the life of your stove and radiates heat more evenly. If firebricks were removed to position appliance, replace them before firing appliance. See figure 7 for proper orientation and positioning. Install the back row first, then sides and finally install bottom firebricks.

ASSEMBLY INSTRUCTIONS

FIREBRICK INSTALLATION

CAUTION: RISK OF FIRE!


- **REPLACE FIREBRICKS BEFORE FIRING WOODSTOVE. POSITION FIREBRICKS SO NO GAPS REMAIN BETWEEN BRICKS.**
- **NEVER OPERATE THIS APPLIANCE WITH MISSING OR CRACKED FIREBRICK.**
- **KEEP FURNISHINGS AND OTHER COMBUSTIBLE MATERIALS AWAY FROM THE STOVE AND OUTSIDE MINIMUM CLEARANCES.**

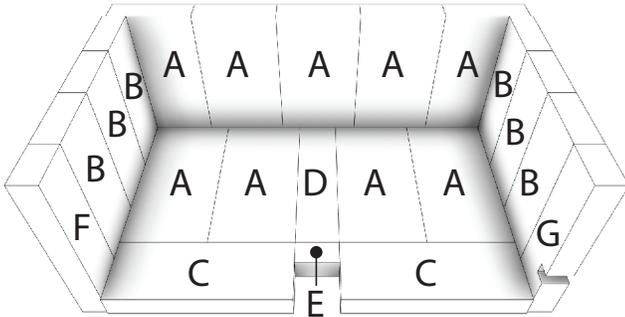

BLOWER INSTALLATION

Remove blower assembly from packaging and check for any damage. Notify your dealer if any damages exist.


Securely mount the blower to the heater with the two (2) screws and washers provided.

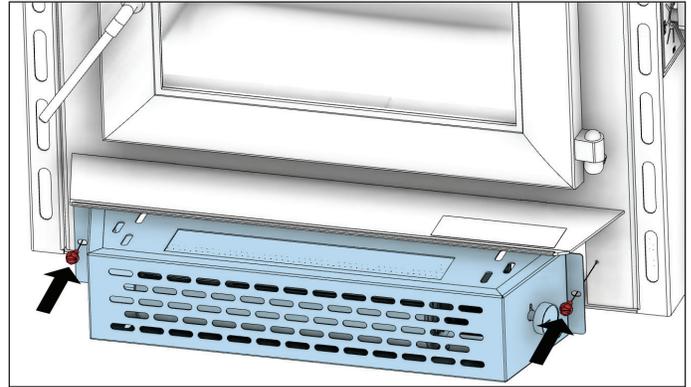

Feuille d'instructions

1800E Instructions de montage en série


ASSEMBLEZ L'HABILLAGE

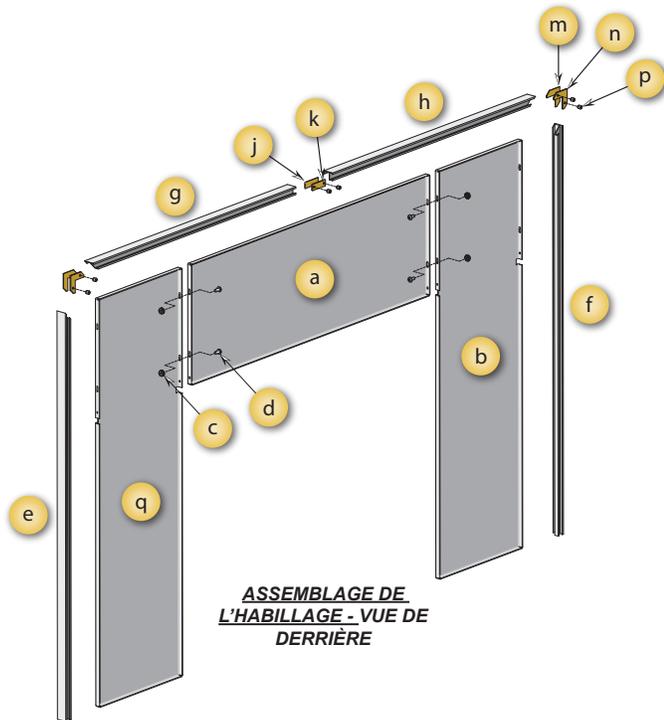


ASSEMBLAGE DE
L'HABILLAGE - VUE DE
DERRIÈRE

1. Posez les pièces face vers le bas sur un tapis ou toute autre surface molle pour protéger la finition pendant l'assemblage. Le Surround se compose de deux panneaux latéraux, d'un panneau supérieur et d'un cadre décoratif.
2. Boulonnez le panneau supérieur (a) aux panneaux latéraux (b et q) de manière à ce que les surfaces supérieures affleurent les unes aux autres à l'aide des éléments c et d.
3. Assemblez le cadre de garniture. La garniture se compose d'une pièce latérale gauche (f) et droite (e) et d'une pièce supérieure fendue (gauche h, droite g). Ceux-ci sont reliés par des connecteurs d'angle (m, n, & p) et deux connecteurs centraux droits (j & k). Ceux-ci glissent dans le canal à l'arrière du cadre et sont fixés avec deux vis de réglage (p) dans chaque pièce.
4. La garniture glisse sur l'ensemble d'encadrement et est fixée à la base de chaque côté avec une vis à métaux.

5. Fixez le logo au panneau latéral (q) à l'aide des (2) deux clips fournis.

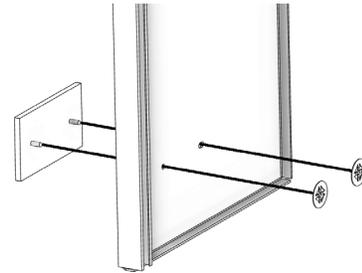

6. L'ensemble Surround est ensuite glissé sur l'appareil. Les fentes dans les deux panneaux latéraux accueillent la hotte en haut de l'appareil. L'ensemble contour est maintenu en place par deux ressorts en haut de chaque coin de l'appareil.

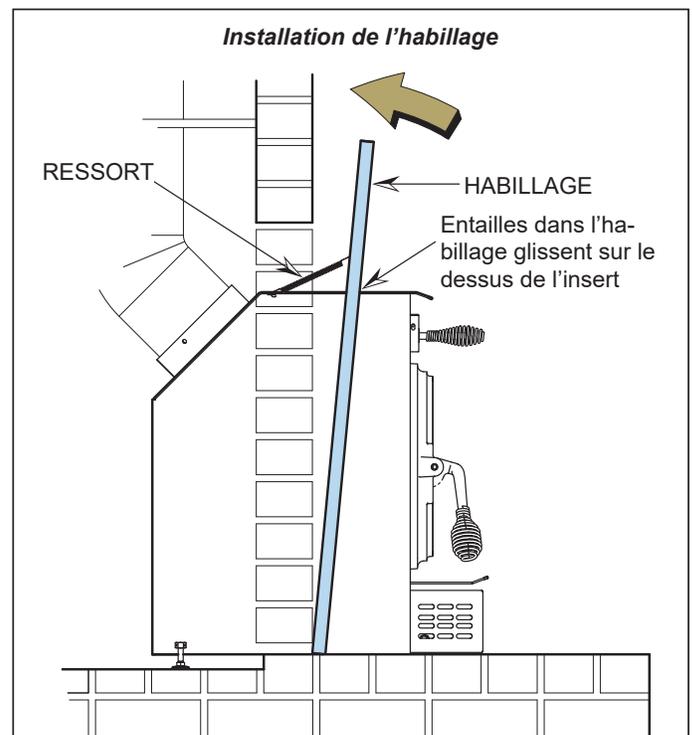


7. Connectez le cordon d'alimentation du ventilateur à une prise mise à la terre.
8. La brique réfractaire prolonge la durée de vie de votre poêle et rayonne la chaleur plus uniformément. Si des briques réfractaires ont été retirées pour positionner l'appareil, remplacez-les avant d'allumer l'appareil. Voir la figure 7 pour l'orientation et le positionnement appropriés. Installez d'abord la rangée arrière, puis les côtés et enfin les briques réfractaires du bas.

INSTALLATION DE BRIQUES RÉFRACTAIRES

ATTENTION: RISQUE D'INCENDIE !

- REMPLACER LES BRIQUES À FEU AVANT DE TIRER LE POÊLE À BOIS. POSITIONNEZ LES BRIQUES DE FEU POUR AUCUN ESPACE NE RESTE ENTRE LES BRIQUES.
- NE JAMAIS FAIRE FONCTIONNER CET APPAREIL AVEC UNE BRIQUE MANQUE OU FISSURÉE.
- GARDER LES MEUBLES ET AUTRES MATÉRIEAUX COMBUSTIBLES LOIN DU POÊLE ET À L'EXTÉRIEUR DES DÉGAGEMENTS MINIMUM.

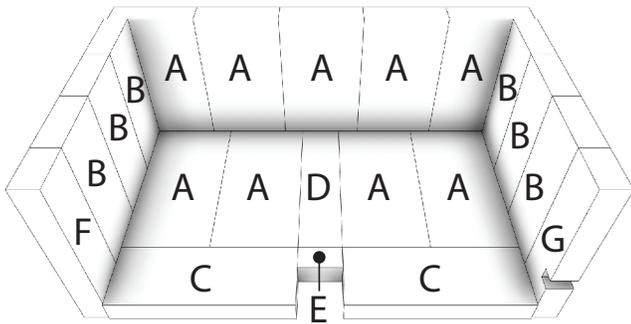

INSTALLATION DU VENTILATEUR

Retirez l'assemblage de la soufflante de l'emballage et vérifiez qu'il n'est pas endommagé. Informez votre revendeur en cas de dommages.

Montez solidement le ventilateur sur le radiateur avec les deux (2) vis et rondelles fournies.

