



2000/2500E Series Assembly Instructions

CAUTION!


THE STOVE IS VERY HEAVY. THE ASSISTANCE FROM A SECOND PERSON IS STRONGLY SUGGESTED. USE APPROPRIATE HELP, TOOLS, AND TECHNIQUES WHEN LIFTING OR MOVING HEAVY OBJECTS.

HARDWARE IDENTIFICATION CHART


KEY	DESCRIPTION	ITEM	QTY
a	Bolt		16
b	Kep Nut		12
c	Screw		18
d	Washer		12
e	Clip		2

PEDESTAL ASSEMBLY


Use the supplied four (4) bolts (a) and kep nuts (b) to secure the extension housing to the pedestal base.

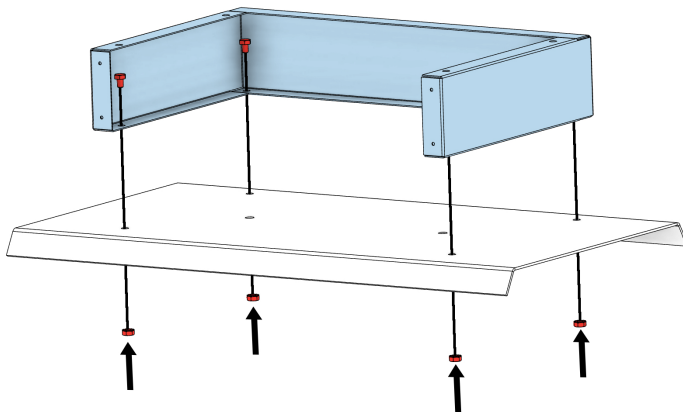


Use a punch to knock out the four holes located in the bottom of the ashpan housing.

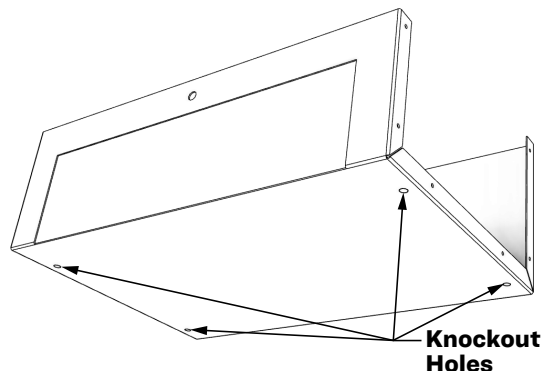

Use the supplied four (4) bolts (a) and kep nuts (b) to secure the ashpan housing to the extension.


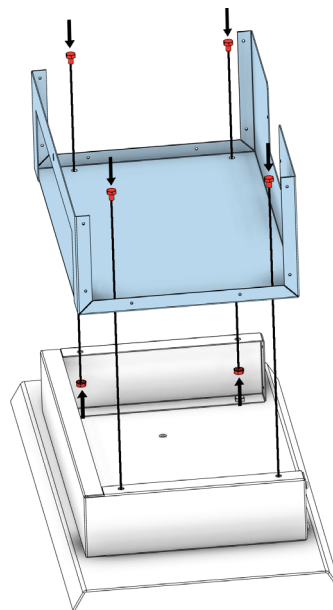


Use the supplied four (4) screws (c) to attach the extension rear to the extension housing.

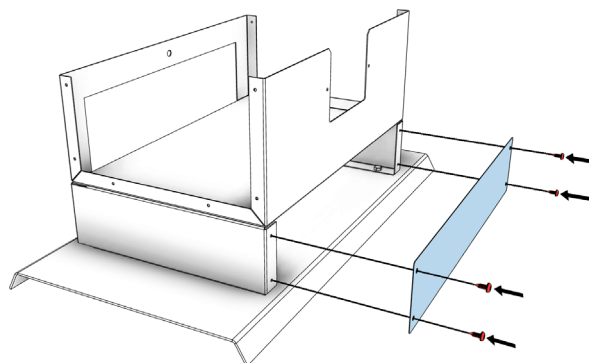


ASSEMBLY INSTRUCTIONS


Secure the left and right housing panels to the ashpan housing assembly using the supplied six (6) screws (c) on each side.

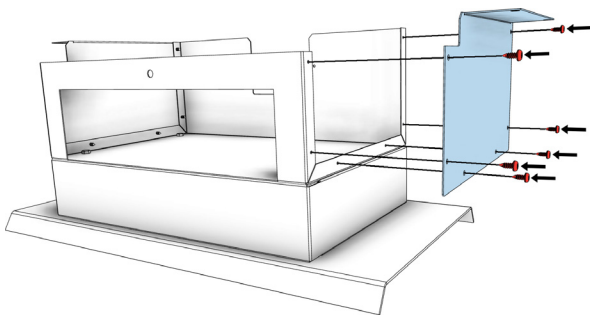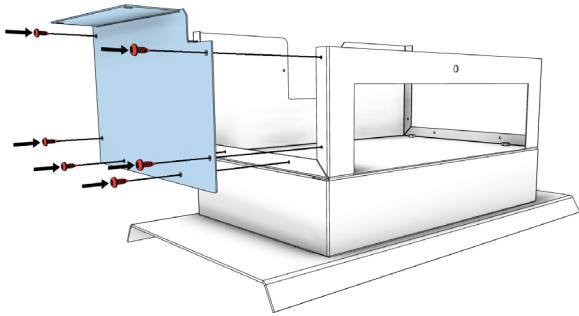


Use the supplied (4) four keps nuts (b) and washers (d) to securely attach the pedestal assembly to the unit.

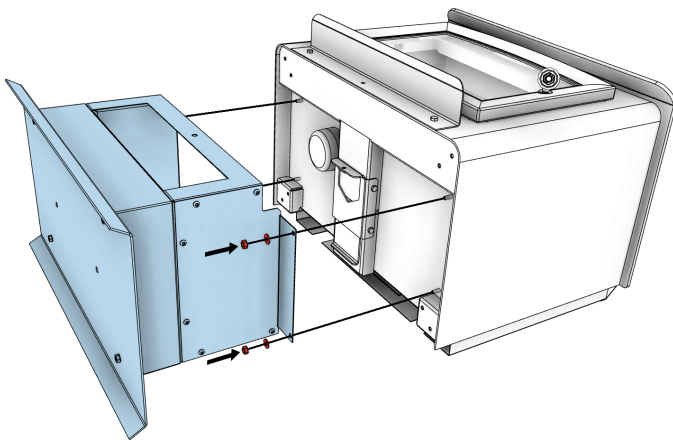


Install the damper rod by threading it into the damper weldment.

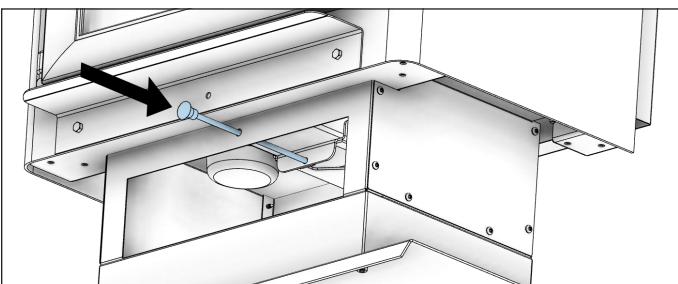


Use the supplied (2) two screws (c) to fasten the fresh air bracket to the ashpan housing assembly.

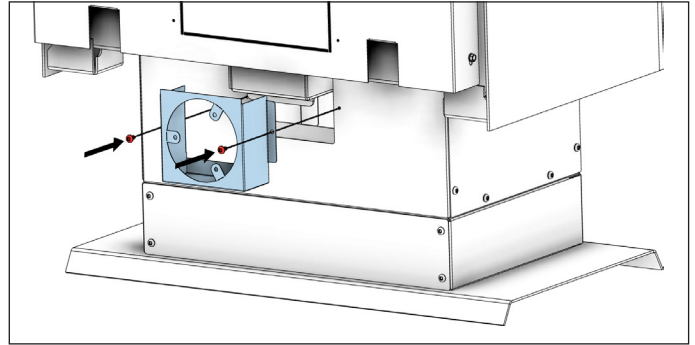

Secure the logo to the ashpan utilizing the (2) two clips (e) provided.

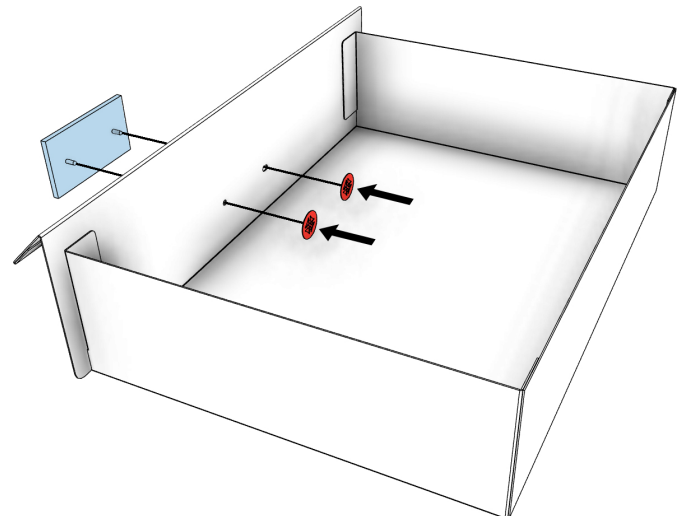


Insert the ashpan into the ashpan housing assembly.

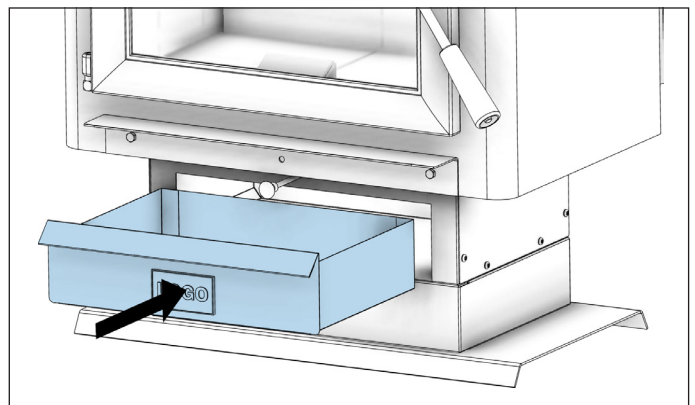


ASSEMBLY INSTRUCTIONS

LEG INSTALLATION


Secure the left and right housing panels to the ashpan housing assembly using the supplied (6) six screws (c) on each side.

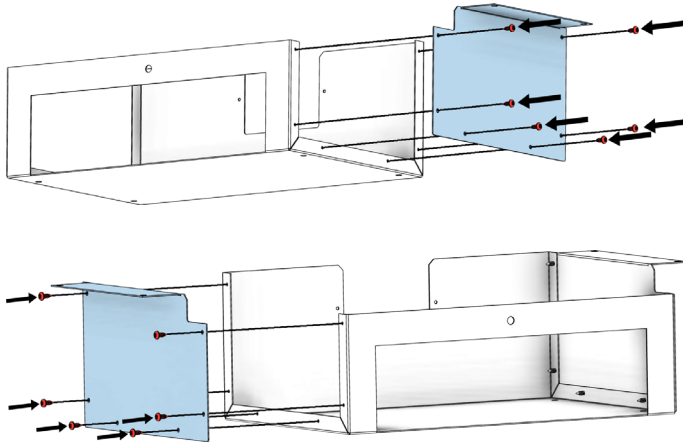



Use the supplied (4) four keps (b) and washers (d) to securely attach the ashpan weldment to the unit.

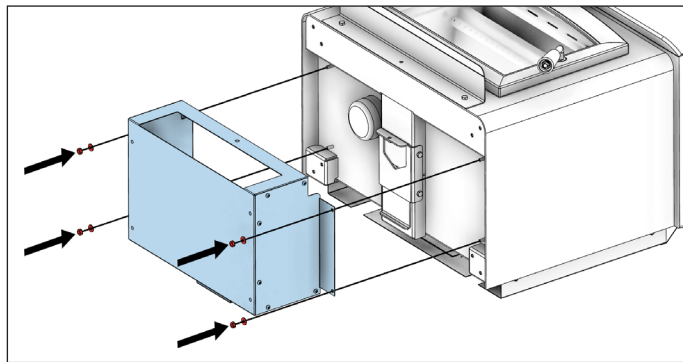


Remove and dispose of the existing hardware.

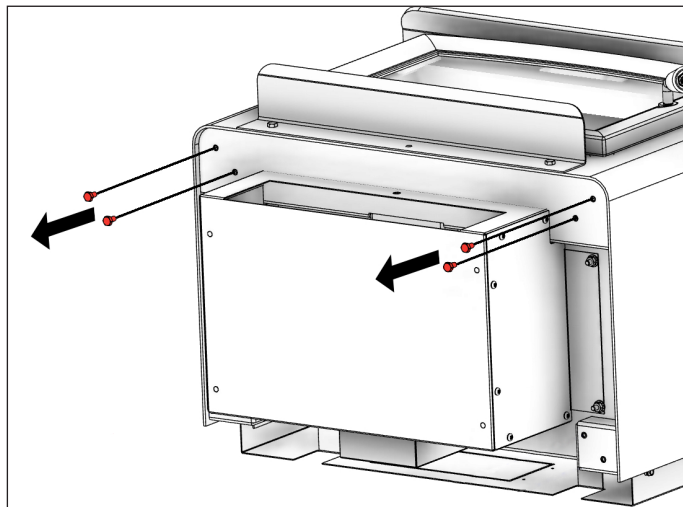

Use the supplied (8) eight bolts (a) and washers (d) to attach the legs to the bottom of the unit. Each leg should be secured with (2) two bolts (a) and (2) two washers (d).

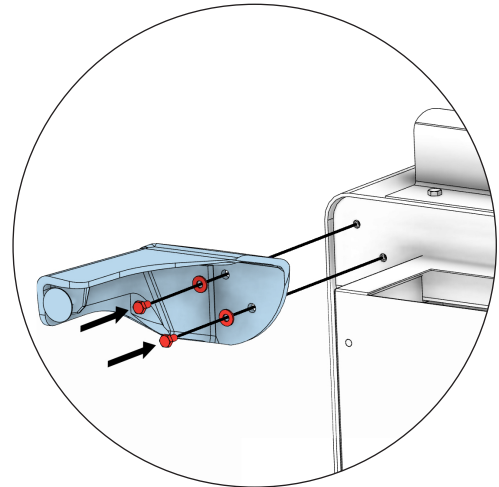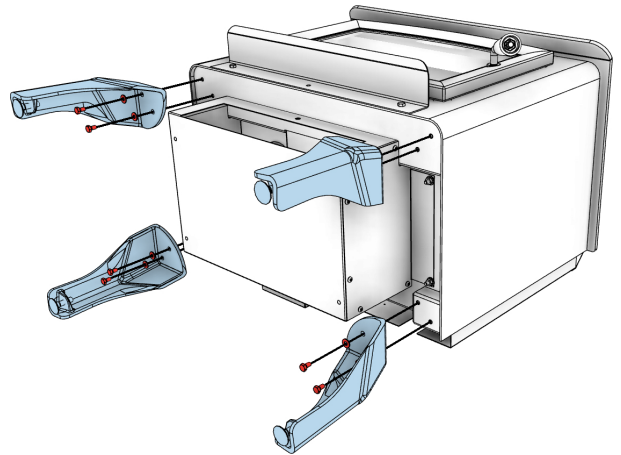


Use the supplied (2) two screws (c) to fasten the fresh air bracket to the ashpan housing assembly.

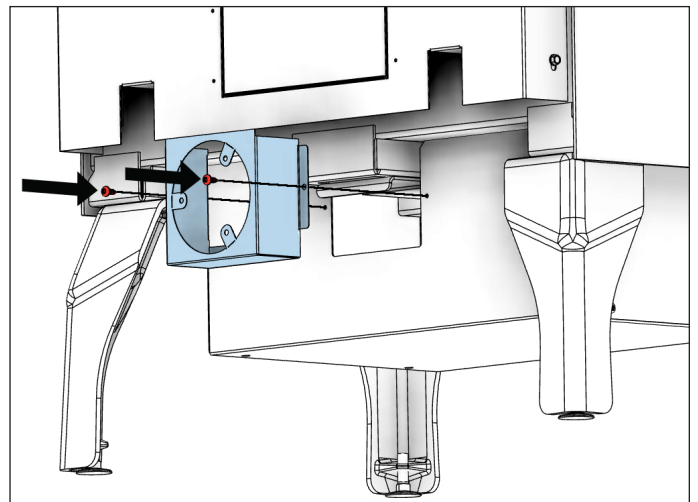


ASSEMBLY INSTRUCTIONS


Install the damper rod by threading it into the damper weldment.

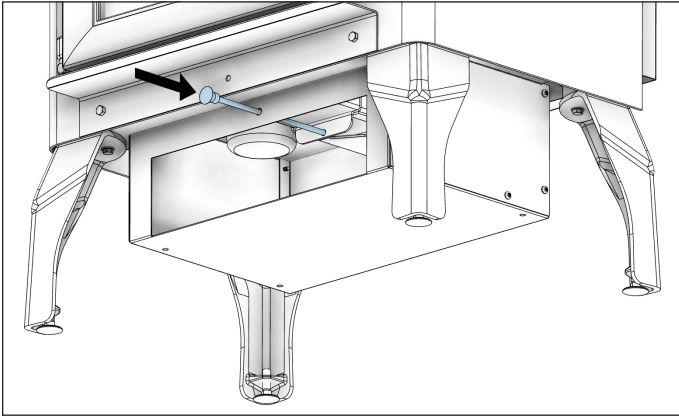

Secure the logo to the ashpan utilizing the (2) two clips (e) provided.

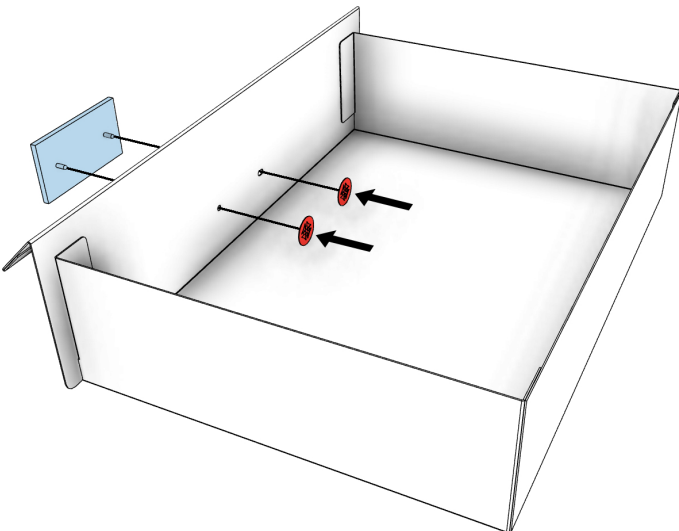


Insert the ashpan into the ashpan housing assembly.

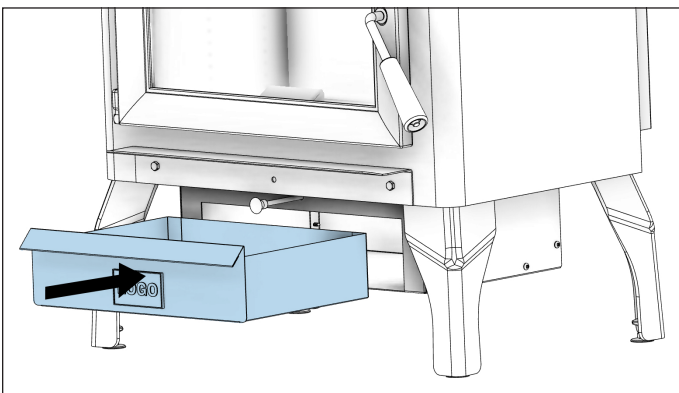


FIREBRICK CONFIGURATION

Replace the firebrick as shown in the illustration.

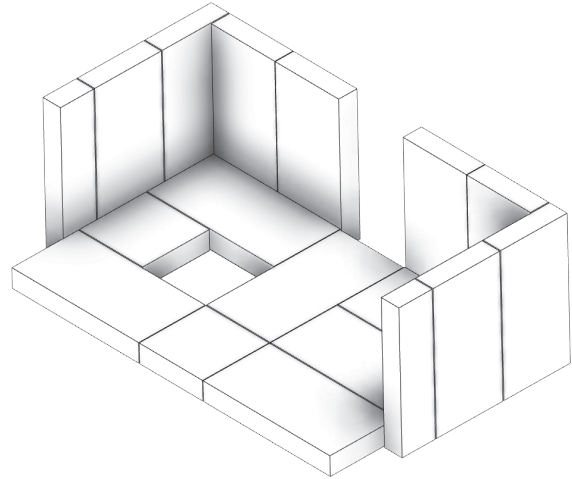


AIR DEFLECTOR ASSEMBLY

Use the provided screws to attach the air deflector to the rear of the unit.

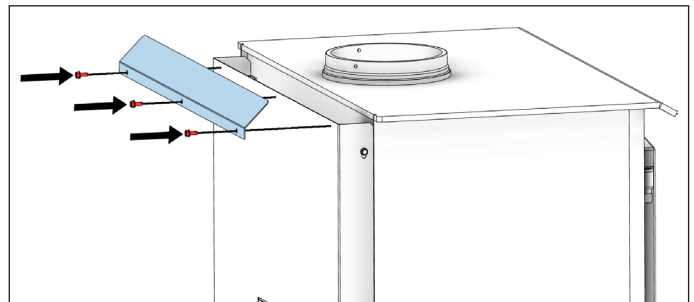

FLUE COLLAR ASSEMBLY

Mount the flue collar to the top of the unit as shown using the three (3) provided bolts, washers, and weld tabs.

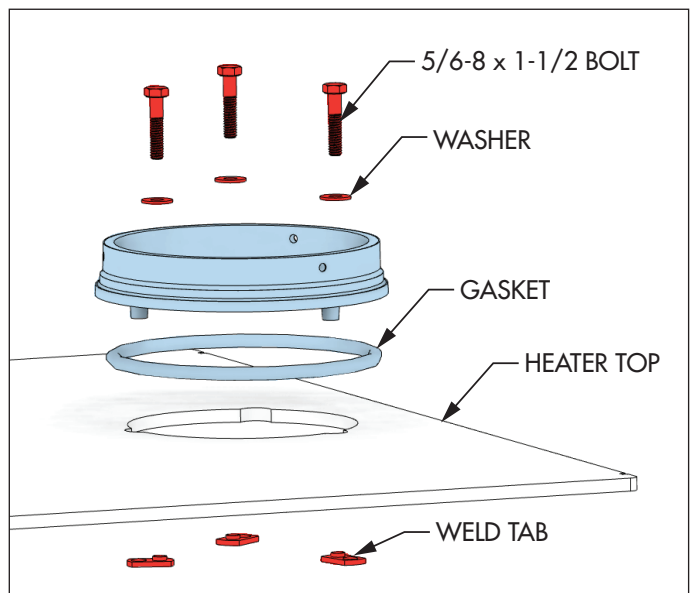


Instructions d'assemblage des séries 2000/2500E

ATTENTION !


LE POÊLE EST TRÈS LOURD. L'AIDE D'UNE DEUXIÈME PERSONNE EST FORTEMENT RECOMMANDÉE. UTILISEZ L'AIDE, LES OUTILS ET LES TECHNIQUES APPROPRIÉS LORS DU SOULÈVEMENT OU DU DÉPLACEMENT D'OBJETS LOURDS.

Utilisez un poinçon pour percer les quatre trous situés au fond du boîtier du cendrier.

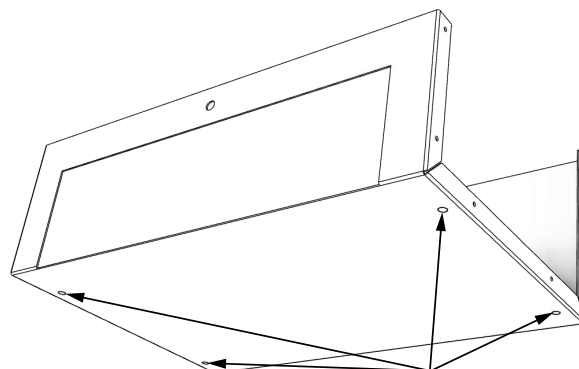


Trous défonçables



Utilisez les quatre (4) boulons (a) et écrous à tête hexagonale (b) fournis pour fixer le boîtier du cendrier à l'extension.

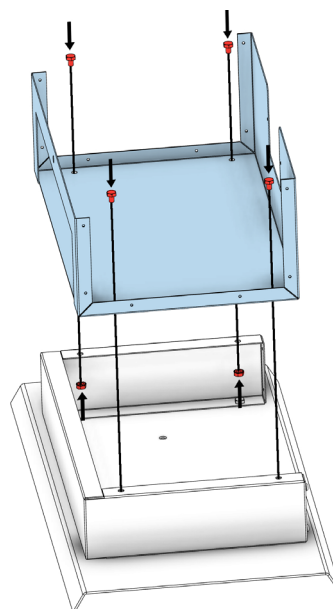

Utilisez les quatre (4) vis fournies (c) pour fixer l'arrière de l'extension au boîtier d'extension.

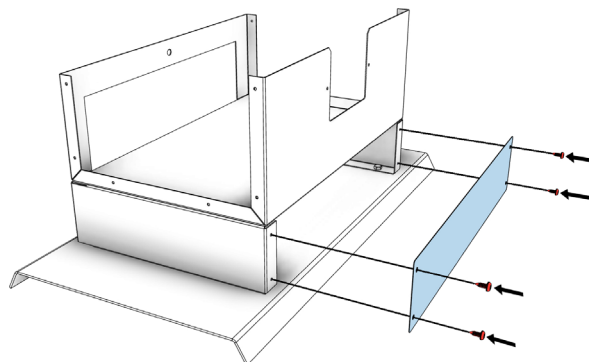


HARDWARE IDENTIFICATION CHART

CLÉ	DESCRIPTION	ARTICLE	QTÉ
a	Boulon		16
b	Écrou de serrage		12
c	Vis		18
d	Rondelle		12
e	Clip		2



ASSEMBLAGE DU PIÉDESTAL

Utilisez les quatre (4) boulons (a) et écrous à tête hexagonale (b) fournis pour fixer le boîtier d'extension à la base du piédestal.

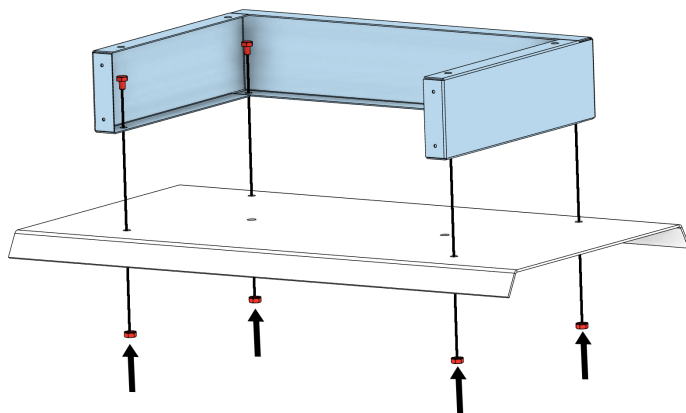


INSTRUCTIONS DE MONTAGE


Fixez les panneaux gauche et droit du boîtier à l'ensemble du boîtier du cendrier à l'aide des six (6) vis (c) fournies de chaque côté.

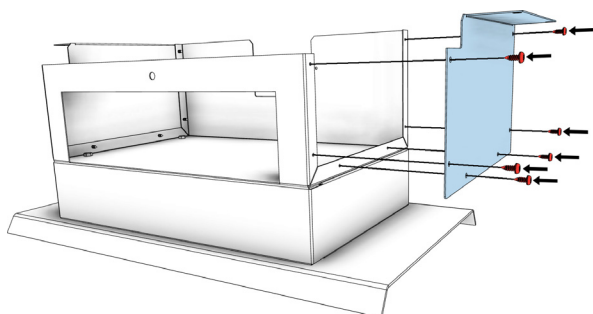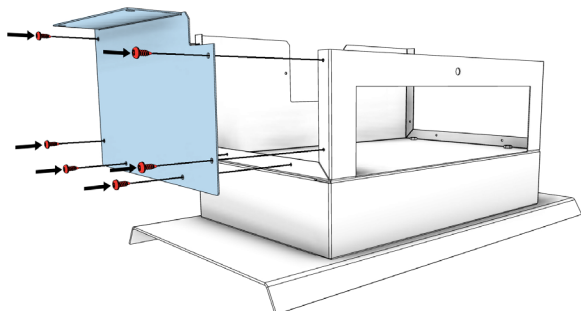


Utilisez les quatre écrous à oreilles (b) et rondelles (d) fournis (4) pour fixer solidement l'ensemble du piédestal à l'unité.

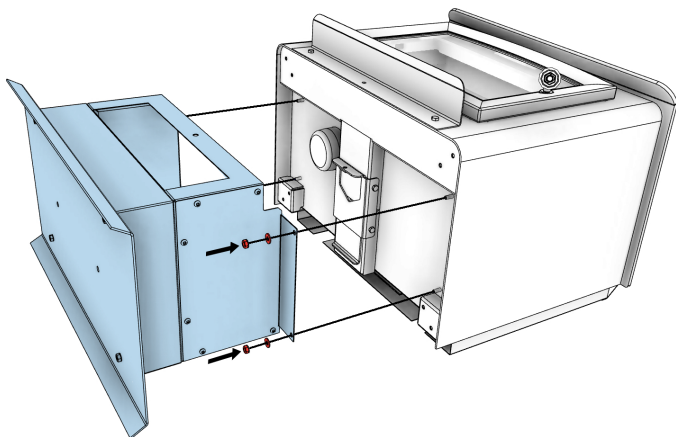


Installez la tige d'amortisseur en la vissant dans la soudure de l'amortisseur.

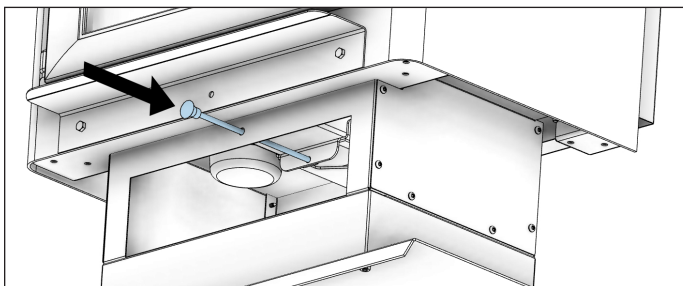


Utilisez les deux vis (c) fournies (2) pour fixer le support d'air frais à l'ensemble du boîtier du cendrier.

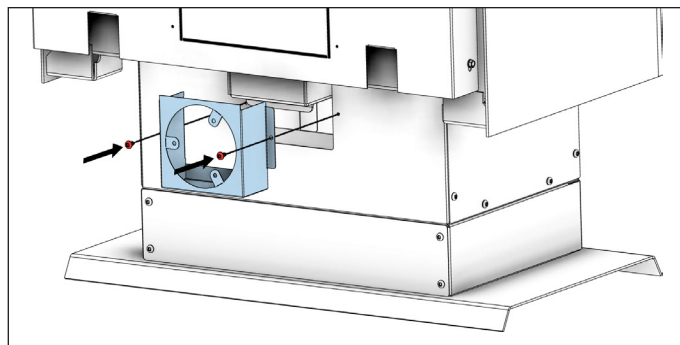

Fixez le logo au cendrier à l'aide des (2) deux clips (e) fournis.

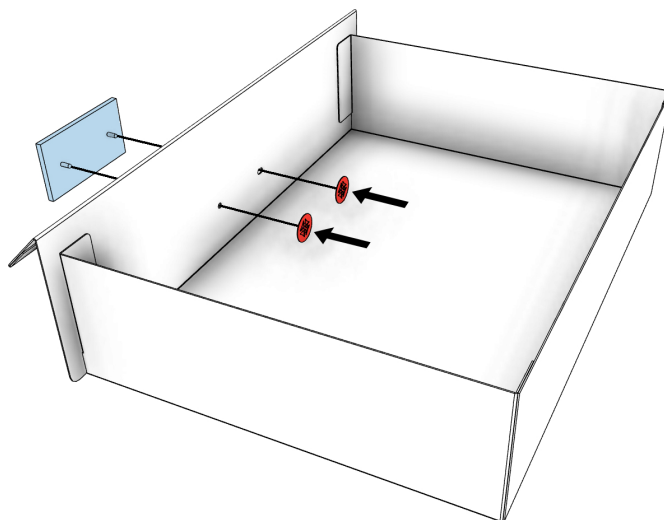


Insérez le cendrier dans le boîtier du cendrier.

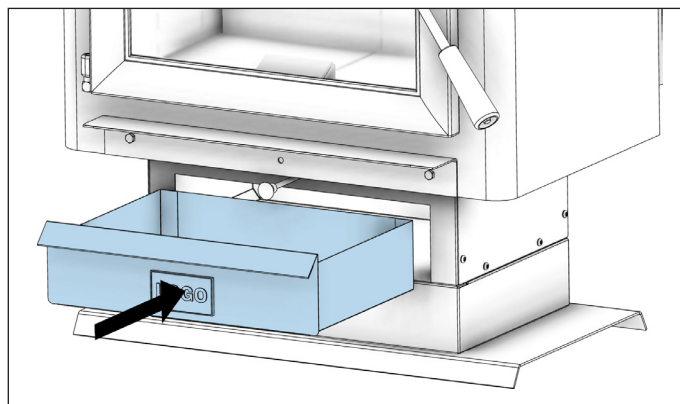


INSTRUCTIONS DE MONTAGE

INSTALLATION DES PIEDS


Fixez les panneaux gauche et droit du boîtier au boîtier du cendrier à l'aide des six vis (c) fournies de chaque côté.

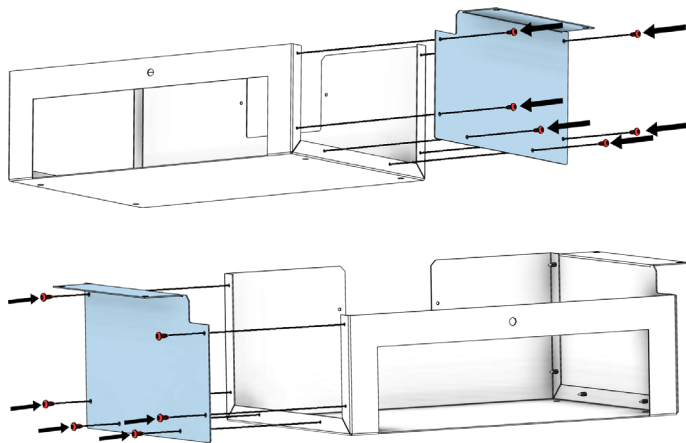



Utilisez les quatre écrous à oreilles (b) et rondelles (d) fournis (4) pour fixer solidement l'assemblage soudé du cendrier à l'appareil.

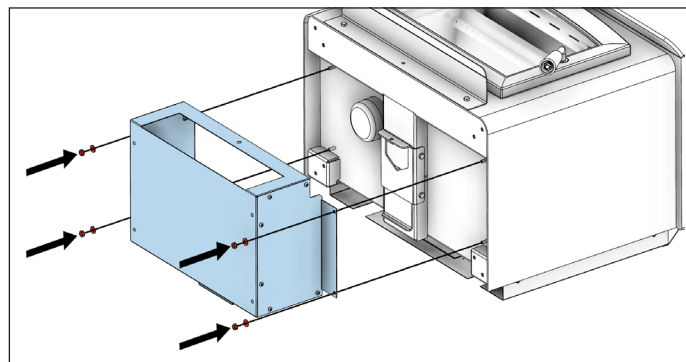


Retirez et jetez le matériel existant.

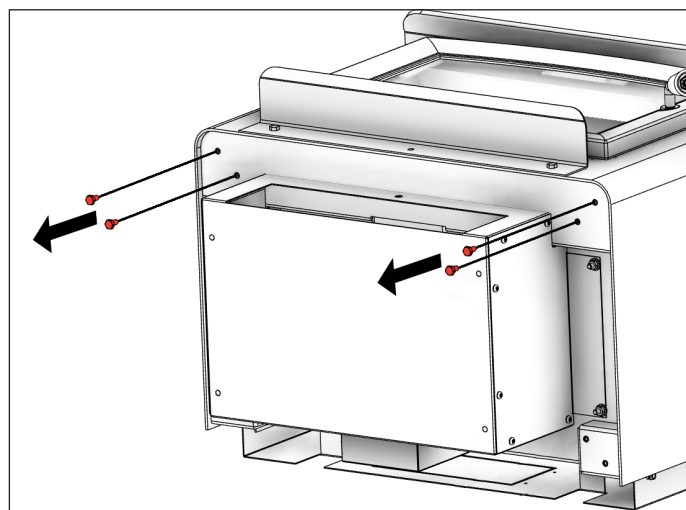


Utilisez les huit boulons (a) et rondelles (d) fournis pour fixer les pieds au bas de l'unité. Chaque pied doit être fixé avec (2) deux boulons (a) et (2) deux rondelles (d).

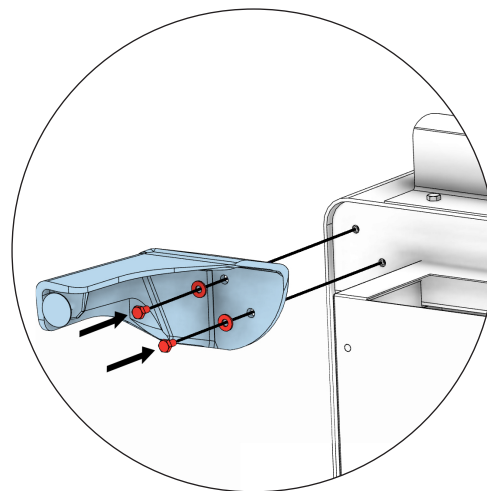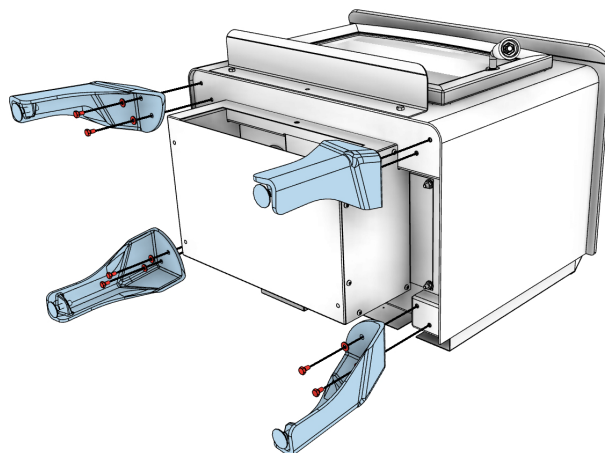


Utilisez les deux vis (c) fournies (2) pour fixer le support d'air frais à l'ensemble du boîtier du cendrier.

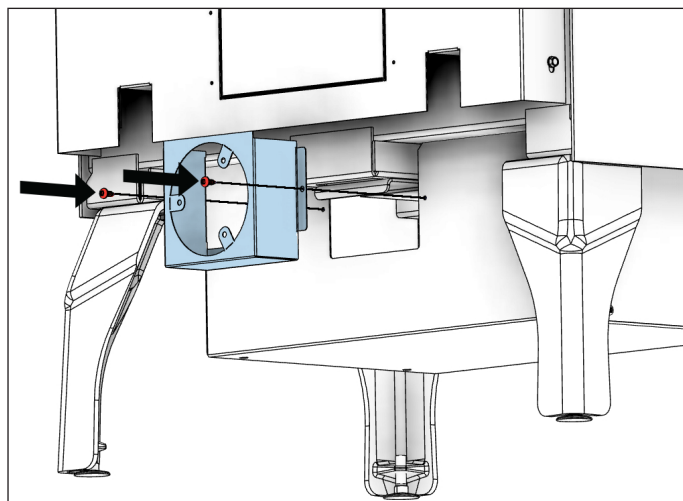


Installez la tige d'amortisseur en la vissant dans la soudure de l'amortisseur.

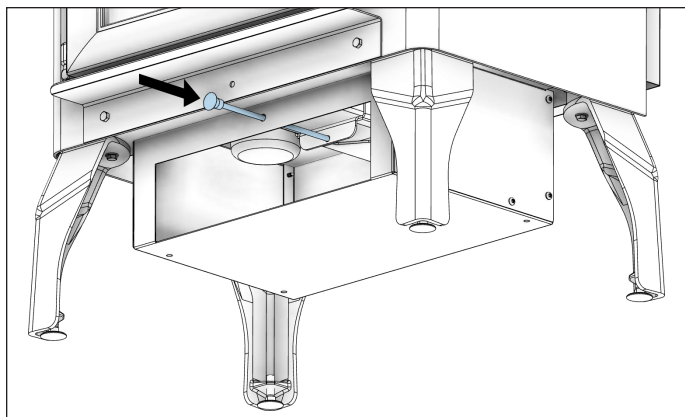

Fixez le logo au cendrier à l'aide des (2) deux clips (e) fournis.

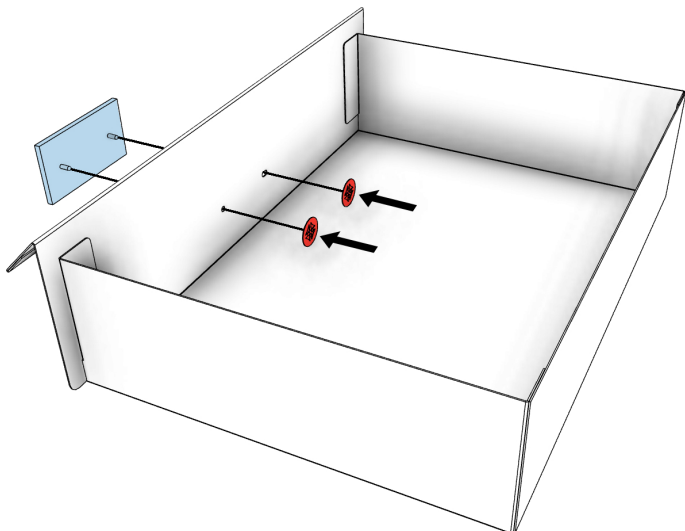


Insérez le cendrier dans le boîtier du cendrier.

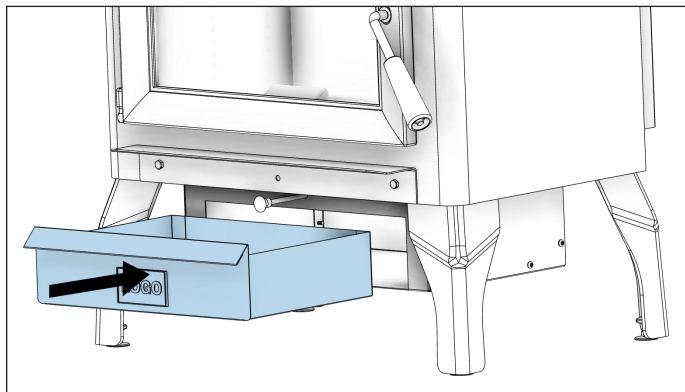


CONFIGURATION DES BRIQUES RÉFRACTAIRES

Remplacez la brique réfractaire comme indiqué sur l'illustration.

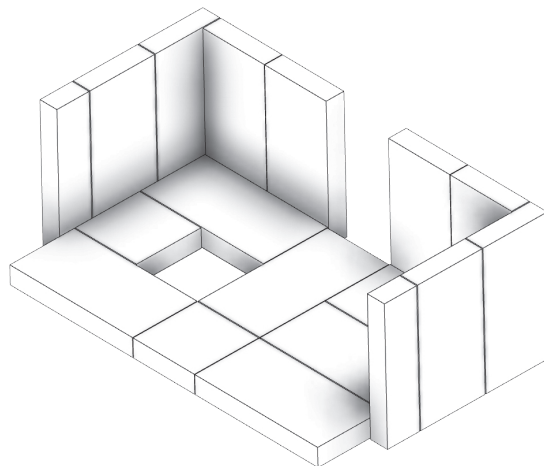

ENSEMBLE DE DÉFLECTEUR D'AIR

Utilisez les vis fournies pour fixer le déflecteur d'air à l'arrière de l'appareil.

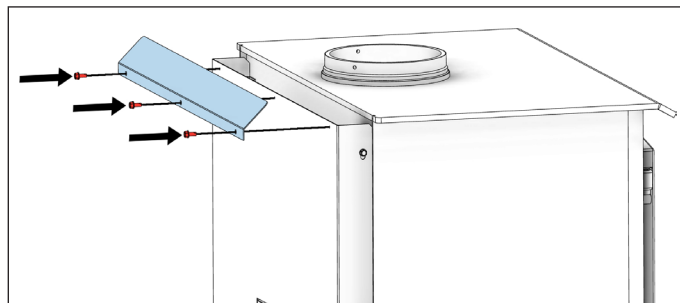

ASSEMBLAGE DU COLLIER DE FUMÉE

Montez le collier de conduit sur le dessus de l'unité comme indiqué à l'aide des trois (3) boulons, rondelles et languettes de soudure fournis.

